 


## Assembly information

The initial tension or the clearance of the roller carriage in the rail can be determined during assembly (see assembly instructions / notes on page 23). Both outer rollers carry the roller carriage, with the middle roller (for eccentric adjustment) supporting the carriage on the opposing rail side. Detailed assembly instructions and the necessary key are included with every roller carriage.

If required, the key may also be ordered separately (GN 2424.1), with two sizes being available:

$A/F_1 / A/F_2 = 8$  for construction size with  $h_1 = 18$ , Article No. **GN 2424.1-8-8**



$A/F_1 = 13$  and  $A/F_2 = 15$  for construction size with  $h_1 = 28 / 35 / 43$ ,

Article No. **GN 2424.1-13-15**

