# HFLT-E

# Rapid levels with float

Technopolymer

## MATERIAL

Body, dipstick and float: Polyamide based technopolymer (PA), grey colour.

## PACKING RINGS

- TPE flat gasket (HFLT-EF).
- NBR synthetic rubber O-Ring (HFLT-ER).

#### CONNECTOR

EN 175301-803 ( A and C shape) /ISO 4400

#### DIPSTICK

010 010

Rŀ

Featuring two raised scales (for floatation in oil and water)

#### STANDARD EXECUTIONS

- HFLT-EF: assembly by means of a flange with 3 holes at 120° for 3 zinc-plated steel screws with hexagon socket, supplied, and a threaded coupler.
- HFLT-ER: assembly by mans of a 1" Gas threaded coupler.


#### MAXIMUM CONTINUOUS WORKING TEMPERATURE: 80° C.

#### FEATURES AND APPLICATIONS

- HFLT-E rapid levels detects a predefined minimum or maximum level, according to the application needs.
- Highly versatile, these rapid levels allow to define both the most accurate set point required by simply disassembling the dipstick float and cutting the dipstick exactly where needed, and the kind of operation required, with normally open (NO) or normally closed (NC) contact in presence of liquid, by loosening the fastening nut on the opposite end of the dipstick and positioning the inner magnet according to specific requirements (refer to the adhesive label).
- The magnet is generally supplied with normally open (NO) contact in presence of liquid.
- Free from magnetic parts, the float is integral to the dipstick making this level indicator ideal for use in tanks containing dirty liquids, water, oil, coolant oil, also with iron metal parts or foams. Moreover, the operation is independent of the fluid electrical conductivity.
- To ensure utmost safety, the electrical components are separated from the tank and perfectly sealed by means of ultrasound welding.

#### SPECIAL EXECUTIONS ON REQUEST

- Polypropylene body (PP)
- With flange with 6 holes for fastening with cylindrical head screws (supplied), in addition to the threaded body.
- For use with maximum working temperature up to 120°C.

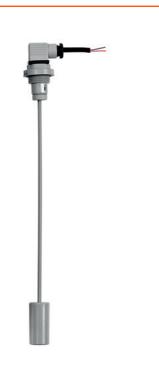


#### TWO-PIN CONNECTOR ASSEMBLY INSTRUCTIONS

- Remove the connectors from the indicator by unscrewing the set screw placed in the bottom, take the contact holders out and loosen the cable glands.
- Slip on the two-pole cable into the connectors (standard connectors) and connect the wires to the terminals nr. 1 and nr. 2 of the relative contact holders.
- Assemble by pressing the contact holders into the realtive connectors in the required position.
- 4. Screw the connectors to the indicator and then tighten the cable glands.




Electrical features										
Tension feed	AC/DC									
	NO normally open									
Electric contacts	in the presence of liquid									
	NC normally closed									
	in the presence of liquid									
Maximum commutable voltage	230 Vdc, 230 Vac									
Maximum opening capacity	2 A									
Commutable power	40 W 40 VA									
Cable gland	Pg 9 / Pg 11 UNIFIED									
Conductors cross-section	Max. 1.5 mm <sup>2</sup>									

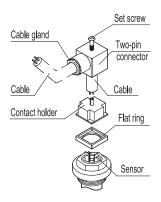



Accessories for hydraulics



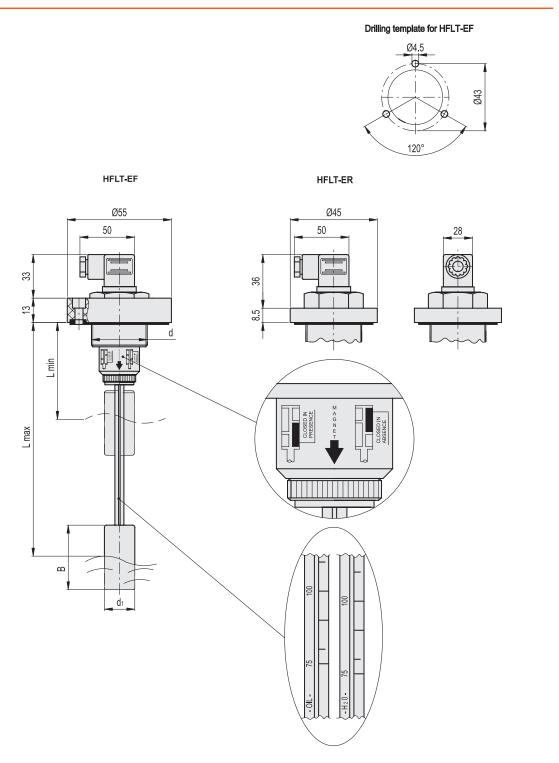

HFLT-EF									HFLT-ER								
Code	Description	d	В	Lmin	Lmax	d1	52	Co	de	Description	d	В	Lmin	Lmax	<b>d</b> 1	5	000
111276	HFLT-EF-3/4	G 3/4	50	75	250	23	110	111	1271	HFLT-ER-3/4	G 3/4	50	75	250	23	110	
111278	HFLT-EF-1	G 1	60	85	360	30	110	111	1273	HFLT-ER-1	G 1	60	85	360	30	110	12

