


Application example

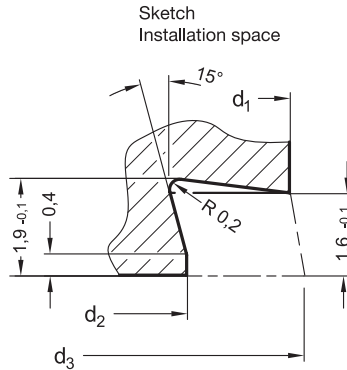

1 2 3

d ₁	d ₂	d ₃	s	d ₁	d ₂	d ₃	s	suitable for
Nominal dimensions - Installation space				Actual dimensions - Sealing rings				
11	7	11,8	1,6	10,25	6	11,35	2	-
12	8	12,8	1,6	11,25	7	12,35	2	GN 429 / GN 1580
13	9	13,8	1,6	12,25	8	13,35	2	-
14	10	14,8	1,6	13,25	9	14,35	2	GN 75.6 / GN 305 / GN 1580
16	12	16,8	1,6	15,25	11	16,35	2	GN 75.6 / GN 429
18	14	18,8	1,6	17,25	13	18,35	2	GN 75.6 / GN 305 / GN 1580 / GN 5435 / GN 5445
19	15	19,8	1,6	18,25	14	19,35	2	-
21	17	21,8	1,6	20,25	16	21,35	2	GN 1580 / GN 5435 / GN 5445
22	18	22,8	1,6	21,25	17	22,35	2	GN 305 / GN 8170
25	21	25,8	1,6	24,25	20	25,35	2	GN 1580
28	24	28,8	1,6	27,25	23	28,35	2	-
30	26	30,8	1,6	29,25	25	30,35	2	GN 20
32	28	32,8	1,6	31,25	27	32,35	2	GN 20 / GN 1580
34	30	34,8	1,6	33,25	29	34,35	2	-

Specification

4 5

- H-NBR **HNBR**
Hydrogenated acrylonitrile butadiene rubber
- blue
- temperature resistant -25 °C to +150 °C
- FDA compliant
- Hardness 85 ±5 Shore A **85**
- EPDM **EPDM**
Ethylene propylene diene rubber
- blue
- temperature resistant -40 °C to +120 °C
- FDA compliant
- Hardness 85 ±5 Shore A **85**
- *Elastomer characteristics* → Page 1483
- RoHS

Information

Components with cylindrical mounting surfaces which are installed in hygiene areas can be sealed and mounted without dead spaces using GN 7600 sealing rings.

As delivered, or unassembled, the sealing rings have the “actual dimensions” as stated in the table. To ensure a firm seating and reliable sealing, an installation space must be provided in the component as shown in the diagram. This ensures that when the sealing ring is installed, it will be subject to the necessary pressure without excess load. All surfaces which are in contact with the sealing ring should have a minimum surface quality of Ra 0.8 µm.

Standard parts which are supplied with GN 7600 sealing rings are listed in the table and can be supplied individually in case service is required.

How to order

1	d ₁
2	d ₂
3	s
4	Material
5	Hardness

1 2 3 4 5
GN 7600-12-8-2-HNBR-85